


# KNOCK SENSOR

TOOLS REQUIRED:  
- SENSOR TESTER

## TEST PROCEDURE

1. TURN SENSOR TESTER ON AND SET TO "RELUCTANCE" FUNCTION.
2. CONNECT THE SENSOR TESTER YELLOW LEAD TO THE CONNECTOR (POST) ON THE SENSOR.
3. HOLD THE END OF THE SENSOR TESTER BLACK LEAD FIRMLY AGAINST THE SENSOR BODY.
4. TAP BASE OF SENSOR ON COUNTER. THE TWO RED TESTER LIGHTS SHOULD FLASH. IF THE TWO RED TESTER LIGHTS DO NOT FLASH, THE SENSOR IS FAULTY AND SHOULD BE REPLACED.

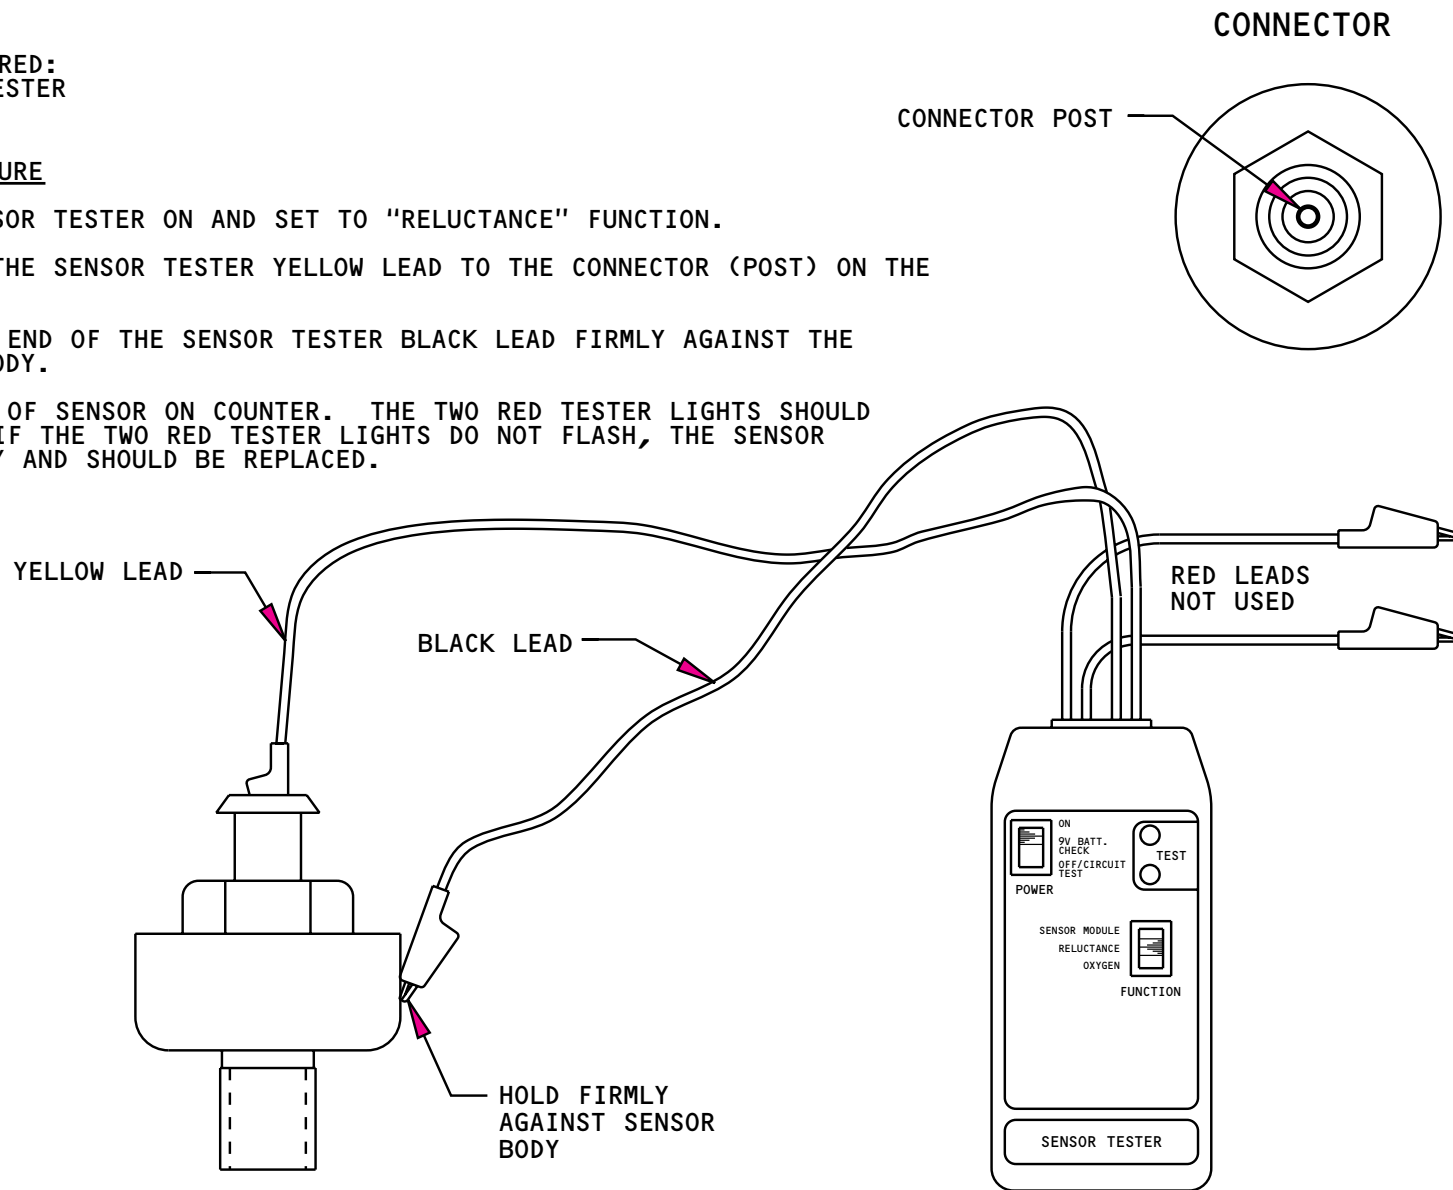

© 2002 WELLS MANUFACTURING CORP. ALL RIGHTS RESERVED.  
NO PORTION OF THIS MANUAL MAY BE REPRODUCED WITHOUT  
THE WRITTEN PERMISSION OF WELLS MANUFACTURING CORP.

TEST SHEET SU6