

KNOCK SENSOR

TOOLS REQUIRED:
- SENSOR TESTER

TEST PROCEDURE

1. TURN SENSOR TESTER ON AND SET TO "RELUCTANCE" FUNCTION.
2. CONNECT THE SENSOR TESTER YELLOW LEAD TO TERMINAL "A" ON THE SENSOR.
3. CONNECT THE SENSOR TESTER BLACK LEAD TO TERMINAL "B" ON THE SENSOR.
4. TAP BASE OF SENSOR ON COUNTER. THE TWO RED TESTER LIGHTS SHOULD FLASH. IF THE TWO RED TESTER LIGHTS DO NOT FLASH, THE SENSOR IS FAULTY AND SHOULD BE REPLACED.

