

SL227 REMOVAL & INSTALLATION INSTRUCTIONS

REMOVAL PROCEDURE

WARNING: In some cases, the electrical power to the air suspension system must be shut off prior to lifting vehicle. The switch can be found in the rear jack storage area. Failure to do so can result in unexpected inflation or deflation of the air springs or shocks, which can result in shifting of the vehicle during these operations.

1. Remove the front stabilizer bar link nut.
2. Remove the front stabilizer bar link bolt. **(Note the direction of the bolt.)**
3. Remove the front stabilizer bar spacer.

INSTALLATION PROCEDURE

1. Install washer and bushing on link bolt.
2. Slide link bolt through stabilizer bar and install bushing and washer.
3. Install spacer, next washer and bushing onto link bolt.
4. Slide link bolt into lower control arm.
5. Install final bushing and washer and nut.
6. Torque nut to 15-21 ft lbs.