

NOTES

1




If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:
WELLS MANUFACTURING, L.P.
1-800-558-9770
FOR CUSTOMER SERVICE**

STEP 1: FIND CORRECT LEAD WIRE

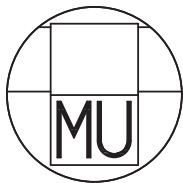

STEP 3: CONNECT TO TESTER

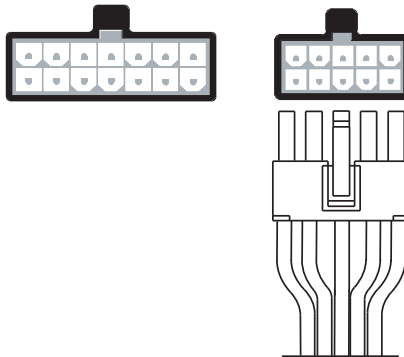


STEP 4: SETTING UP TESTER

Enter product select number "06" and press start to begin test.



STEP 2: MAKE CONNECTIONS TO PART (CR125)

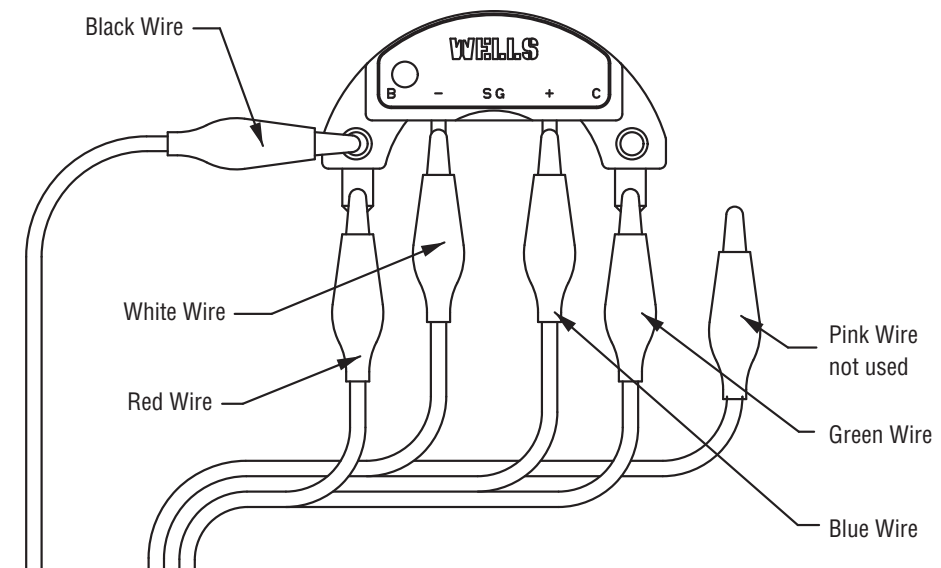

DANGER: Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

Switched Battery

Positive

Input Signal

Negative

Input Signal

Positive

Ignition Coil

Negative

Back Plate

Battery Negative

