

# CONTROL MODULE DR128 (A)

©2009 WELLS Manufacturing, L.P.  
All Rights Reserved. No portion of this manual may be reproduced without the written permission of Wells Manufacturing, L.P.

## NOTES

1




If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:  
WELLS MANUFACTURING, L.P.  
1-800-558-9770  
FOR CUSTOMER SERVICE**

## STEP 1: FIND CORRECT LEAD WIRE

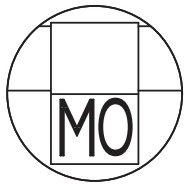

## STEP 3: CONNECT TO TESTER

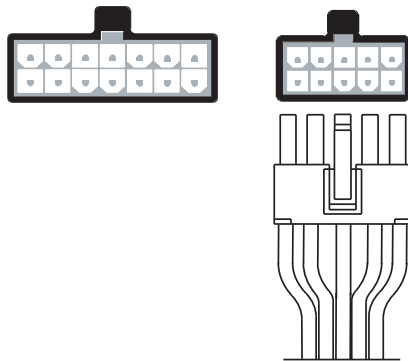


## STEP 4: SETTING UP TESTER

Enter product select number "21" and press start to begin test.



## STEP 2: MAKE CONNECTIONS TO PART (DR128)

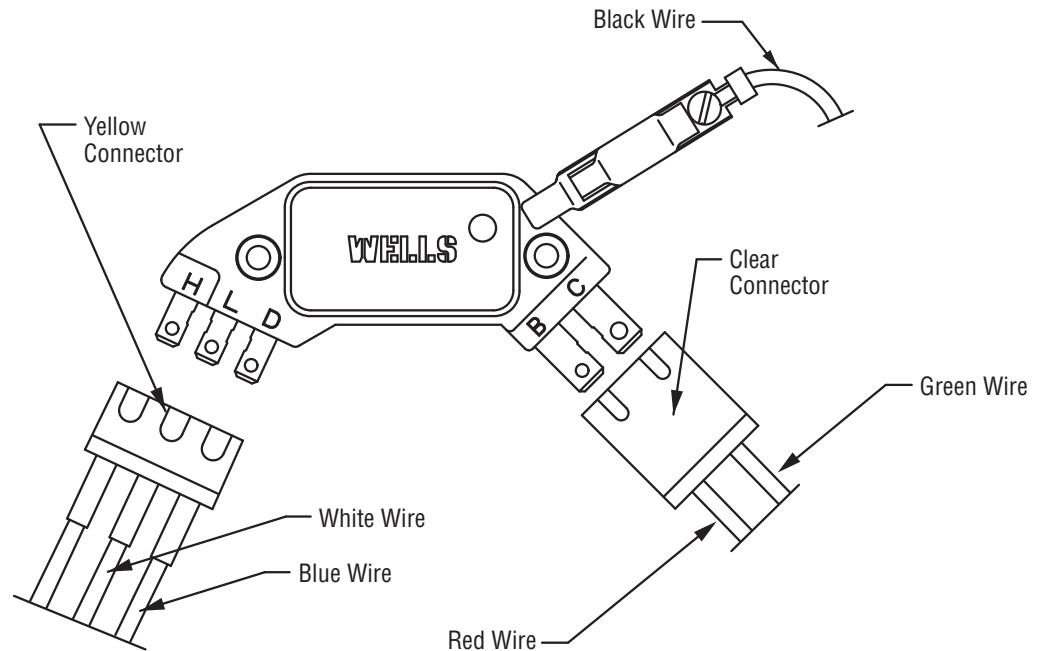

**DANGER:** Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.



**Ignition Coil Negative**

**Battery Positive**

**Backplate- Battery Negative**

**Input From Knock Sensor**

**Input Signal Negative**

**Input Signal Positive**