


## NOTES

1

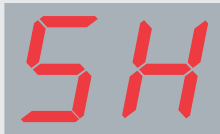


If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:  
WELLS MANUFACTURING, L.P.  
1-800-558-9770  
FOR CUSTOMER SERVICE**

### STEP 1: FIND CORRECT LEAD WIRE

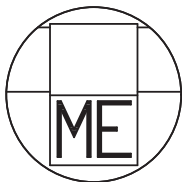

### STEP 3: CONNECT TO TESTER

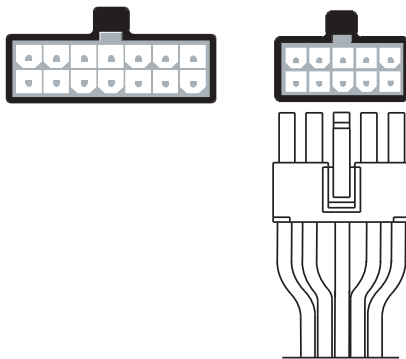


### STEP 4: SETTING UP TESTER


Enter product select number "07" and press start to begin test.



### STEP 2: MAKE CONNECTIONS TO PART (DR133)

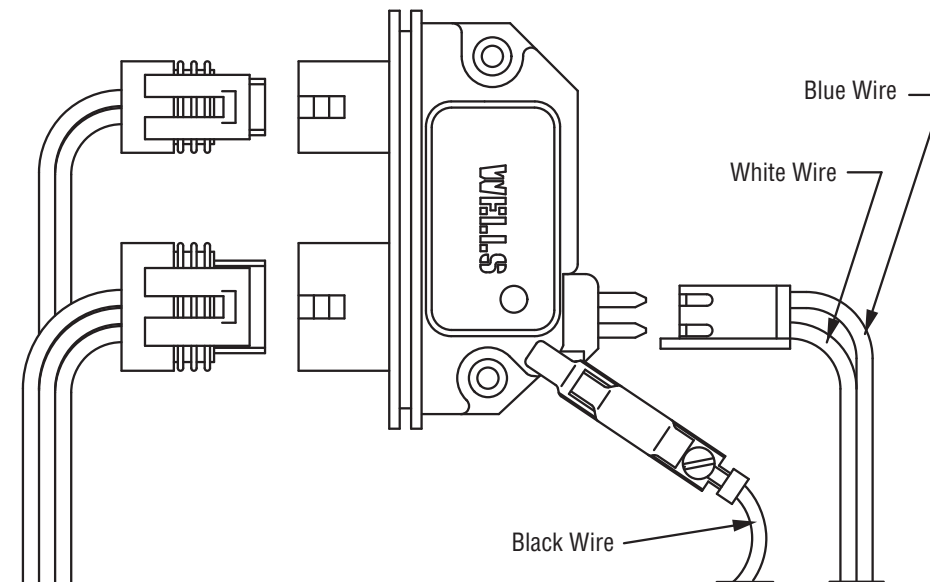

**DANGER:** Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

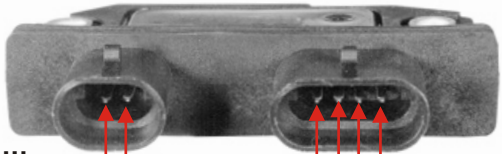

**Battery Positive**  
**Ignition Coil Negative**

**Reference Signal Ground**

**Bypass Terminal**

**Reference Output**

**EST Input**

**Backplate- Battery Negative**

**Input Signal Positive**

**Input Signal Negative**

