

CONTROL MODULE DR144 (Rel)

©2009 WELLS Manufacturing, L.P.
All Rights Reserved. No portion of this manual may be reproduced without the written permission of Wells Manufacturing, L.P.

NOTES

1




If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:
WELLS MANUFACTURING, L.P.
1-800-558-9770
FOR CUSTOMER SERVICE**

STEP 1: FIND CORRECT LEAD WIRE

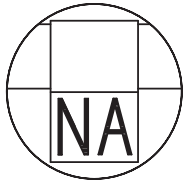


STEP 3: CONNECT TO TESTER

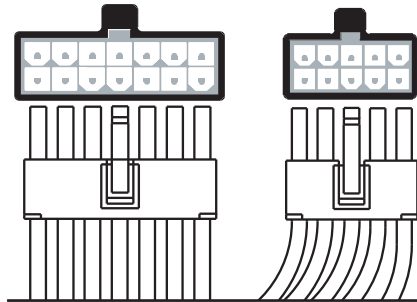


STEP 4: SETTING UP TESTER

 
Enter product select number "11" and press start to begin test.



STEP 2: MAKE CONNECTIONS TO PART (DR144)

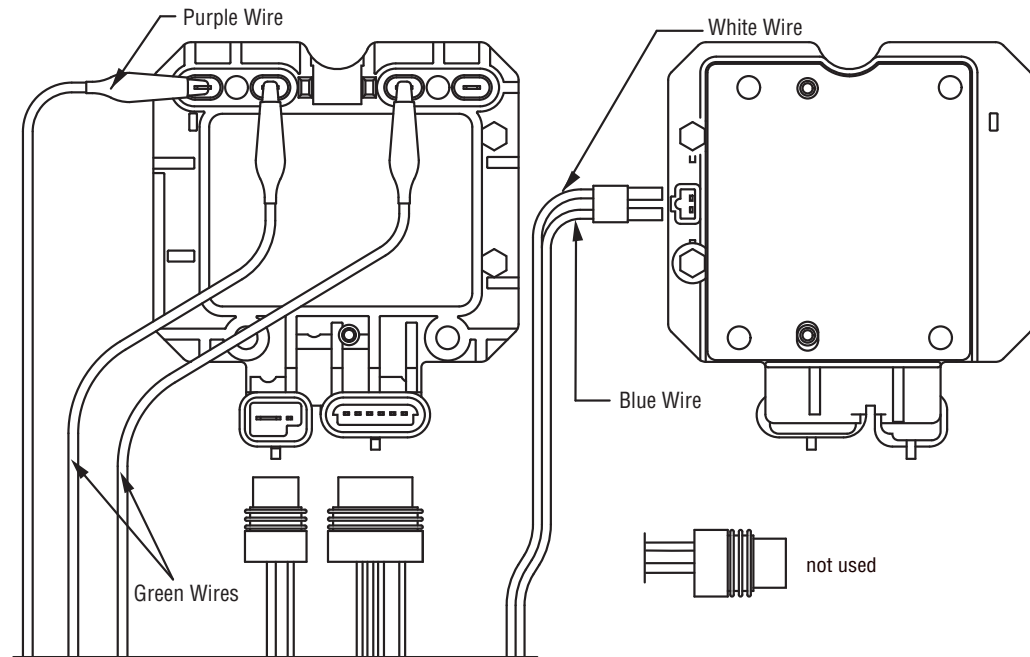


DANGER: Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

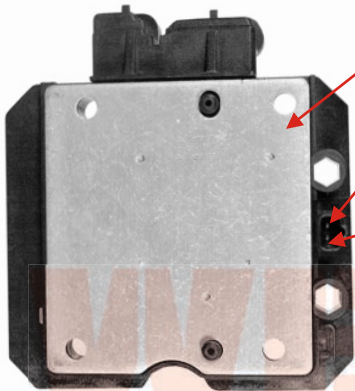

**Backplate-
Battery Negative**

**Crankshaft Sensor
Positive**

**Crankshaft Sensor
Negative**

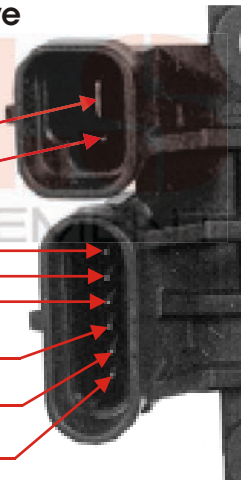

Battery Positive

Battery Negative

Reference Low

Reference High

Bypass Input

EST Input

Not Used

Tachometer