


## NOTES

1

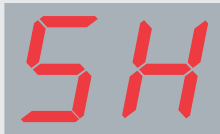


If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:  
WELLS MANUFACTURING, L.P.  
1-800-558-9770  
FOR CUSTOMER SERVICE**

### STEP 1: FIND CORRECT LEAD WIRE

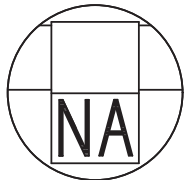


### STEP 3: CONNECT TO TESTER

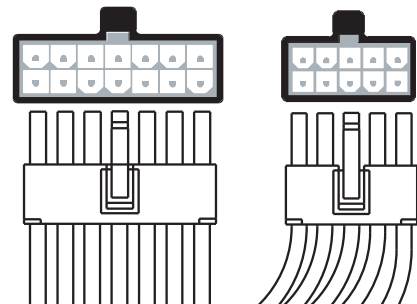


### STEP 4: SETTING UP TESTER

 Enter product select number "11" and press start to begin test.



### STEP 2: MAKE CONNECTIONS TO PART (DR149)

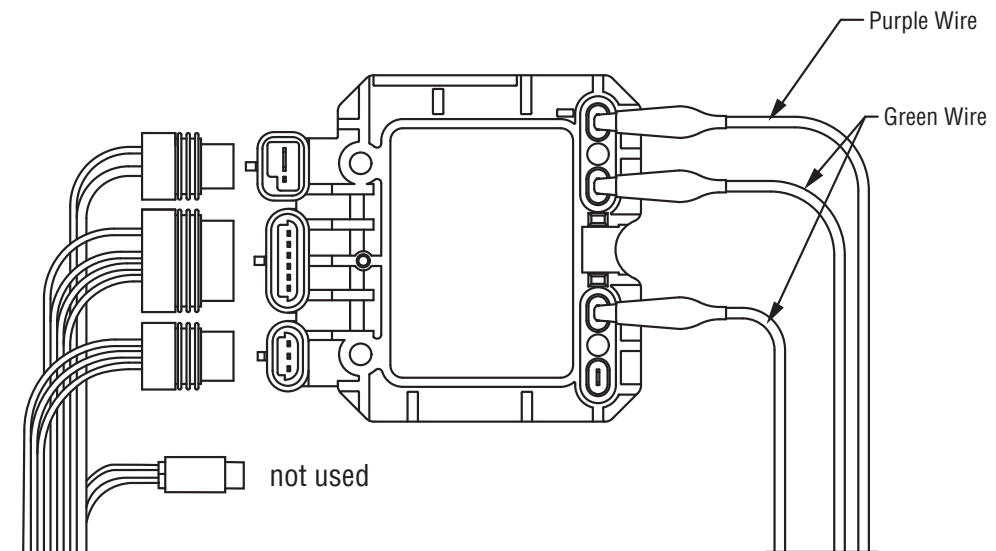

**DANGER:** Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

**Battery Negative**

**Crankshaft Sensor Negative**

**Crankshaft Sensor Positive**

**Tachometer**

**1x Output**

**EST Input**

**Bypass Input**

**Reference High**

**Reference Low**

**Battery Positive**

**Battery Negative**

