

NOTES

1

SH


If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

FOR ASSISTANCE CALL:
WELLS MANUFACTURING, L.P.
1-800-558-9770
FOR CUSTOMER SERVICE

STEP 1: FIND CORRECT LEAD WIRE

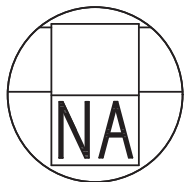

STEP 3: CONNECT TO TESTER


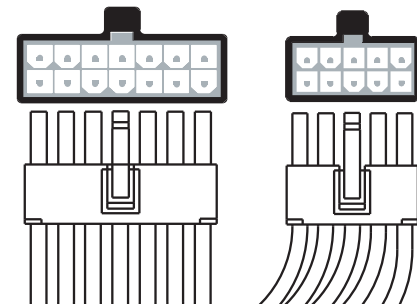


STEP 4: SETTING UP TESTER

Enter product select number "53" and press start to begin test.


53

STEP 2: MAKE CONNECTIONS TO PART (DR173)

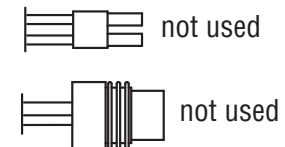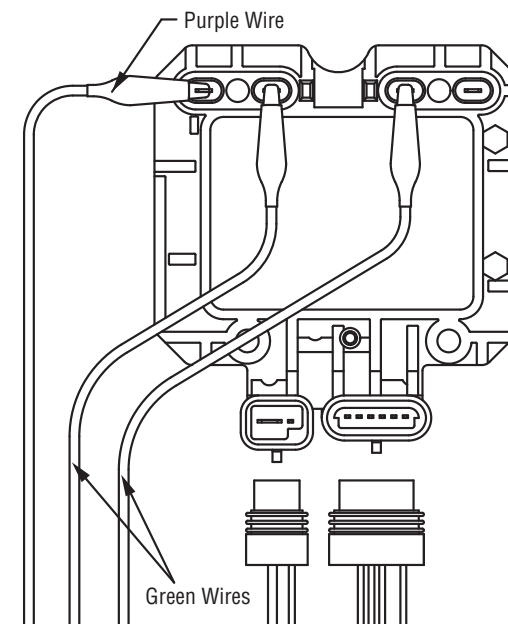

DANGER: Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

- Battery Positive
- Battery Negative
- Input Signal Ground
- EST 1-4 Input Signal Positive
- EST 2-3 Input Signal Positive
- No Connection
- No Connection
- No Connection

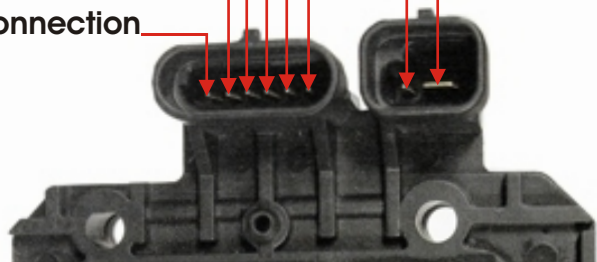

WHEELS
ENGINE MANAGEMENT