


## NOTES

1

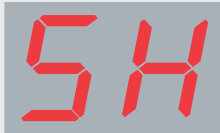

If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:  
WELLS MANUFACTURING, L.P.  
1-800-558-9770  
FOR CUSTOMER SERVICE**

### STEP 1: FIND CORRECT LEAD WIRE



### STEP 3: CONNECT TO TESTER

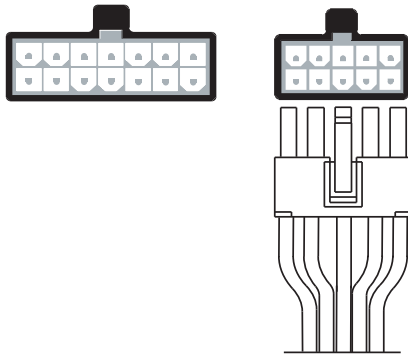


### STEP 4: SETTING UP TESTER

Enter product select number "03" and press start to begin test.



### STEP 2: MAKE CONNECTIONS TO PART (F102)

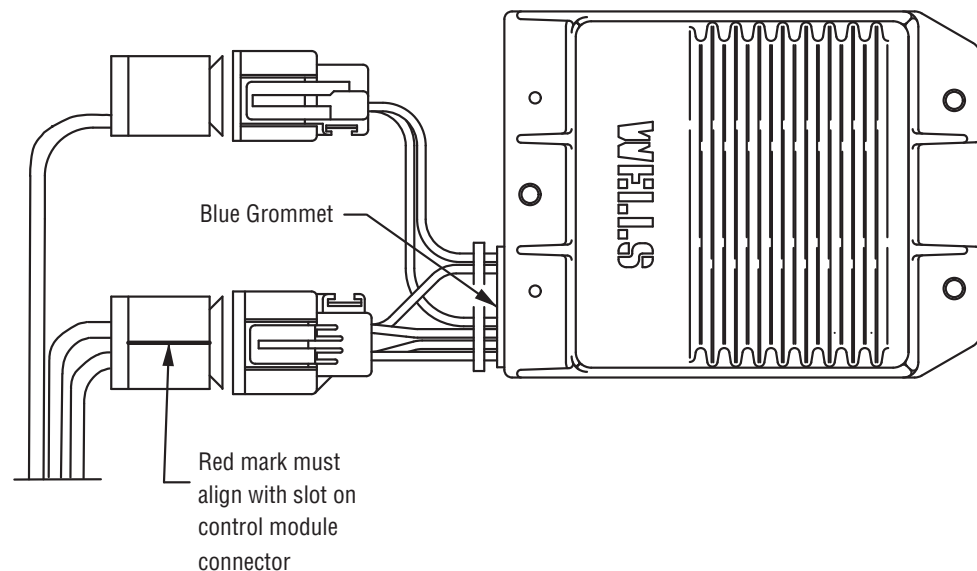

**DANGER:** Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

White Wire- Start Terminal

Red Wire- Run Terminal- Battery  
Positive Through Ignition Switch

Green Wire- Ignition Coil Negative Terminal

Black Wire- Battery Negative-  
Ground From Distributor

Purple Wire- Input Signal Negative-  
Negative Sine From Pick-up

Orange Wire- Input Signal Positive-  
Positive Sine From Pick-up

