

CONTROL MODULE F114 (Rel)

©2009 WELLS Manufacturing, L.P.
All Rights Reserved. No portion of this manual may be reproduced without the written permission of Wells Manufacturing, L.P.

NOTES

1




If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:
WELLS MANUFACTURING, L.P.
1-800-558-9770
FOR CUSTOMER SERVICE**

STEP 1: FIND CORRECT LEAD WIRE

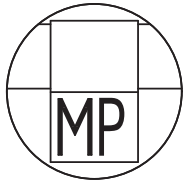

STEP 3: CONNECT TO TESTER

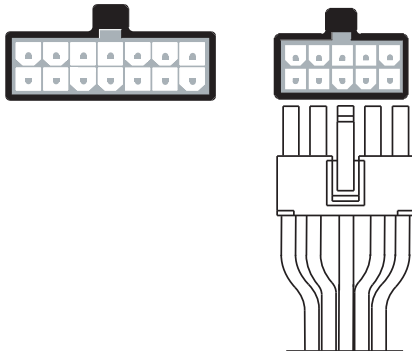


STEP 4: SETTING UP TESTER

Enter product select number "03" and press start to begin test.




STEP 2: MAKE CONNECTIONS TO PART (F114)

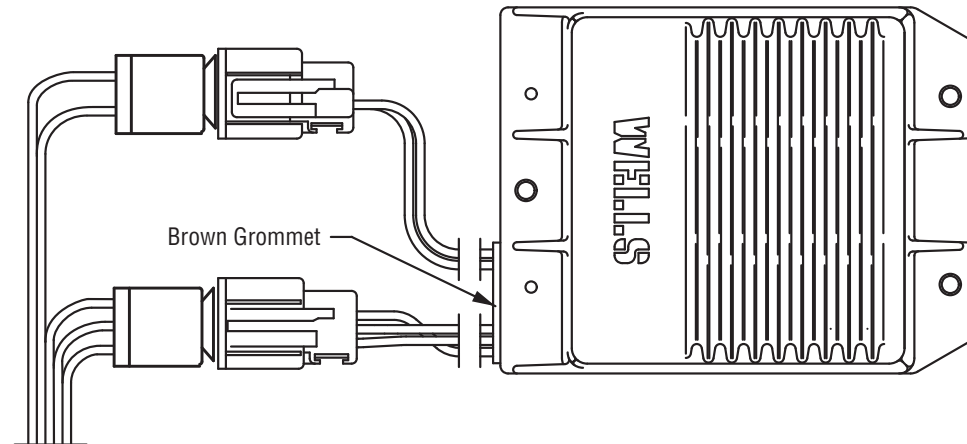

DANGER: Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

White Wire- Start Terminal

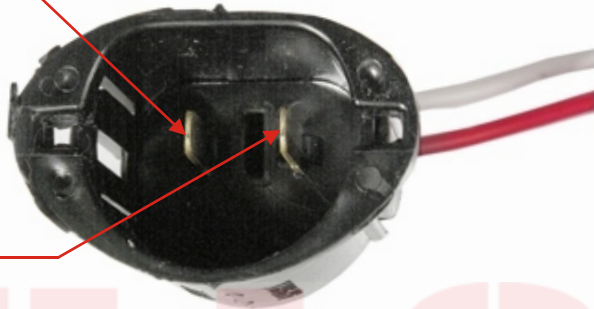

Red Wire- Run Terminal- Battery
Positive Through Ignition Switch

Green Wire- Ignition Coil
Negative Terminal

Orange Wire- Input Signal
Positive- Pick-up Coil

Black Wire- Battery Negative-
Ground From Distributor

