


## NOTES

1

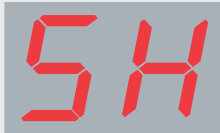


If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:  
WELLS MANUFACTURING, L.P.  
1-800-558-9770  
FOR CUSTOMER SERVICE**

### STEP 1: FIND CORRECT LEAD WIRE

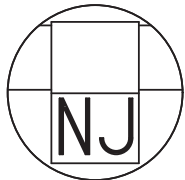

### STEP 3: CONNECT TO TESTER

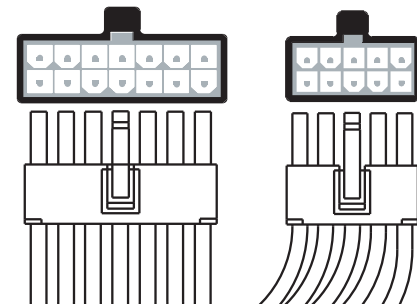


### STEP 4: SETTING UP TESTER

Enter product select number "19" and press start to begin test.



### STEP 2: MAKE CONNECTIONS TO PART (F147 /F136)

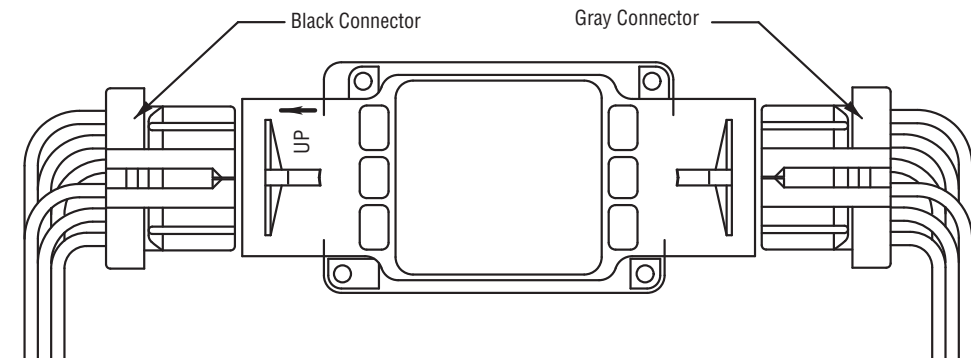

**DANGER:** Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

**Pin 1-6**



**Pin 7-12**

**Pin 1- Battery Voltage Run**  
**Pin 2- Camshaft Sensor Input**  
**Pin 3- Not Used**  
**Pin 4- Crankshaft Sensor Input**  
**Pin 5- Spout Connection**  
**Pin 6- Battery Voltage Cranking**

**Pin 7- Ignition Ground**  
**Pin 8- Coil A Primary**  
**Pin 9- Coil C Primary**  
**Pin 10- Not Used**  
**Pin 11- Coil B Primary**  
**Pin 12- Ignition Diagnostic Monitor**