

NOTES

1




If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:
WELLS MANUFACTURING, L.P.
1-800-558-9770
FOR CUSTOMER SERVICE**

STEP 1: FIND CORRECT LEAD WIRE

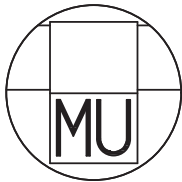


STEP 3: CONNECT TO TESTER

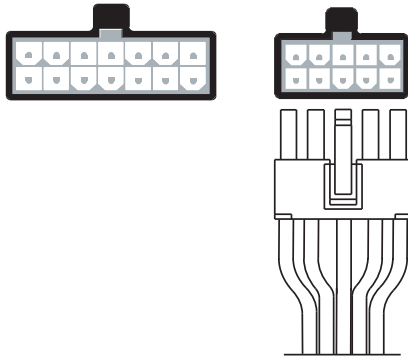


STEP 4: SETTING UP TESTER

 Enter product select number "17" and press start to begin test.



STEP 2: MAKE CONNECTIONS TO PART (JA179)

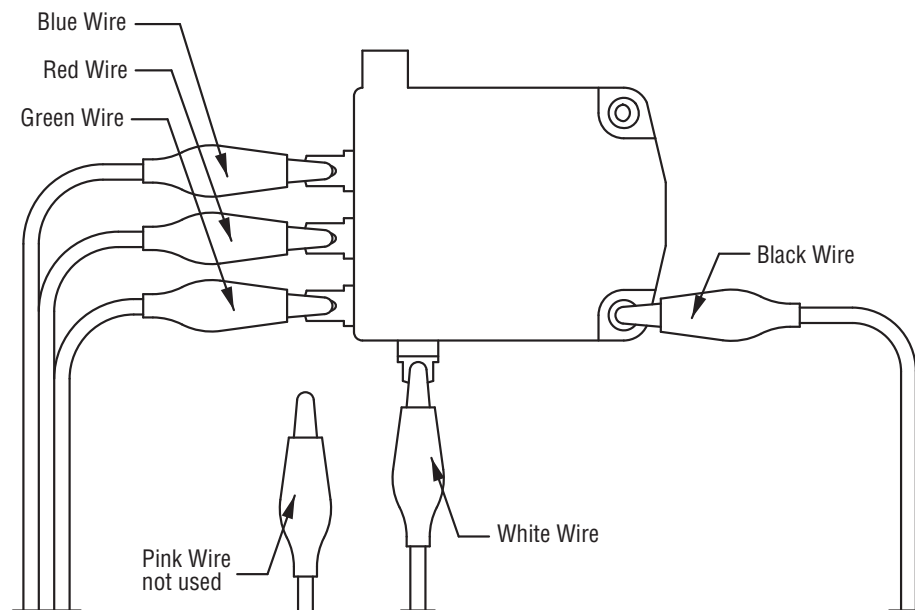

DANGER: Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.


Ignition Timing
Control From ECM

Battery Positive
From Ignition Switch

Coil Negative

Tach Signal

Backplate- Ground

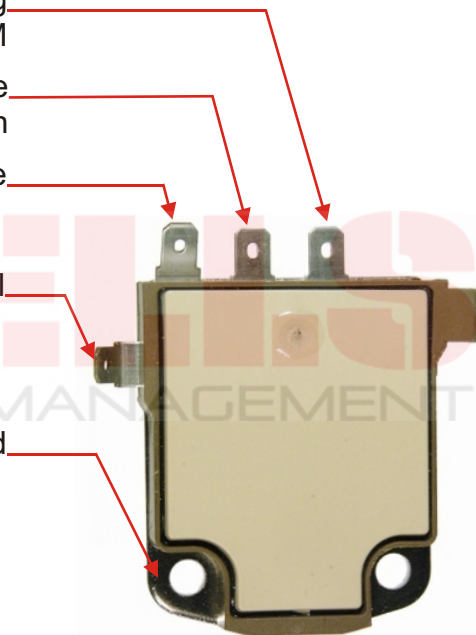

WHEELS
ENGINE MANAGEMENT