

NOTES

1



If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:
WELLS MANUFACTURING, L.P.
1-800-558-9770
FOR CUSTOMER SERVICE**

STEP 1: FIND CORRECT LEAD WIRE



STEP 3: CONNECT TO TESTER

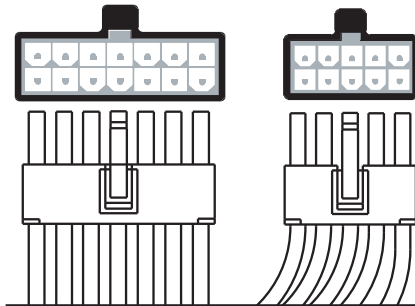


STEP 4: SETTING UP TESTER

Enter product select number "29" and press start to begin test.



STEP 2: MAKE CONNECTIONS TO PART (SA102)

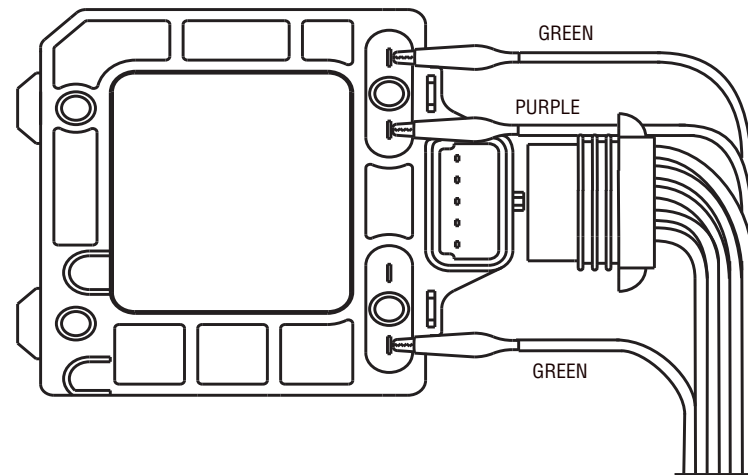

DANGER: Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

EST Coil 1-4 In

Cylinder 4 Out-
Cam Signal

EST Coil 2-3 In

Ground

Battery Positive

Coil 2-3 Negative

Coil 2-3 Positive

Coil 1-4 Positive

Coil 1-4 Negative

Backplate Ground

