


# SPEED SENSOR

TOOLS REQUIRED:  
- SENSOR TESTER

## TEST PROCEDURE

1. TURN SENSOR TESTER ON AND SET TO "SENSOR/MODULE" FUNCTION.
2. FOR 2-PIN SENSORS, CONNECT THE SENSOR TESTER YELLOW LEAD TO EITHER TERMINAL. CONNECT THE SENSOR TESTER BLACK LEAD TO THE OTHER TERMINAL.
3. FOR 3-PIN SENSORS, CONNECT SENSOR TESTER RED LEAD TO TERMINAL "A", SENSOR TESTER BLACK LEAD TO TERMINAL "B" AND SENSOR TESTER YELLOW LEAD TO TERMINAL "C".
4. ROTATE THE SHAFT ON THE SENSOR LOCATED AT THE OPPOSITE END OF THE TERMINALS. THE SENSOR TESTER LIGHTS SHOULD FLASH ON AND OFF AS YOU ROTATE THE SHAFT. IF THE LIGHTS DO NOT FLASH, THE SENSOR IS FAULTY AND SHOULD BE REPLACED.

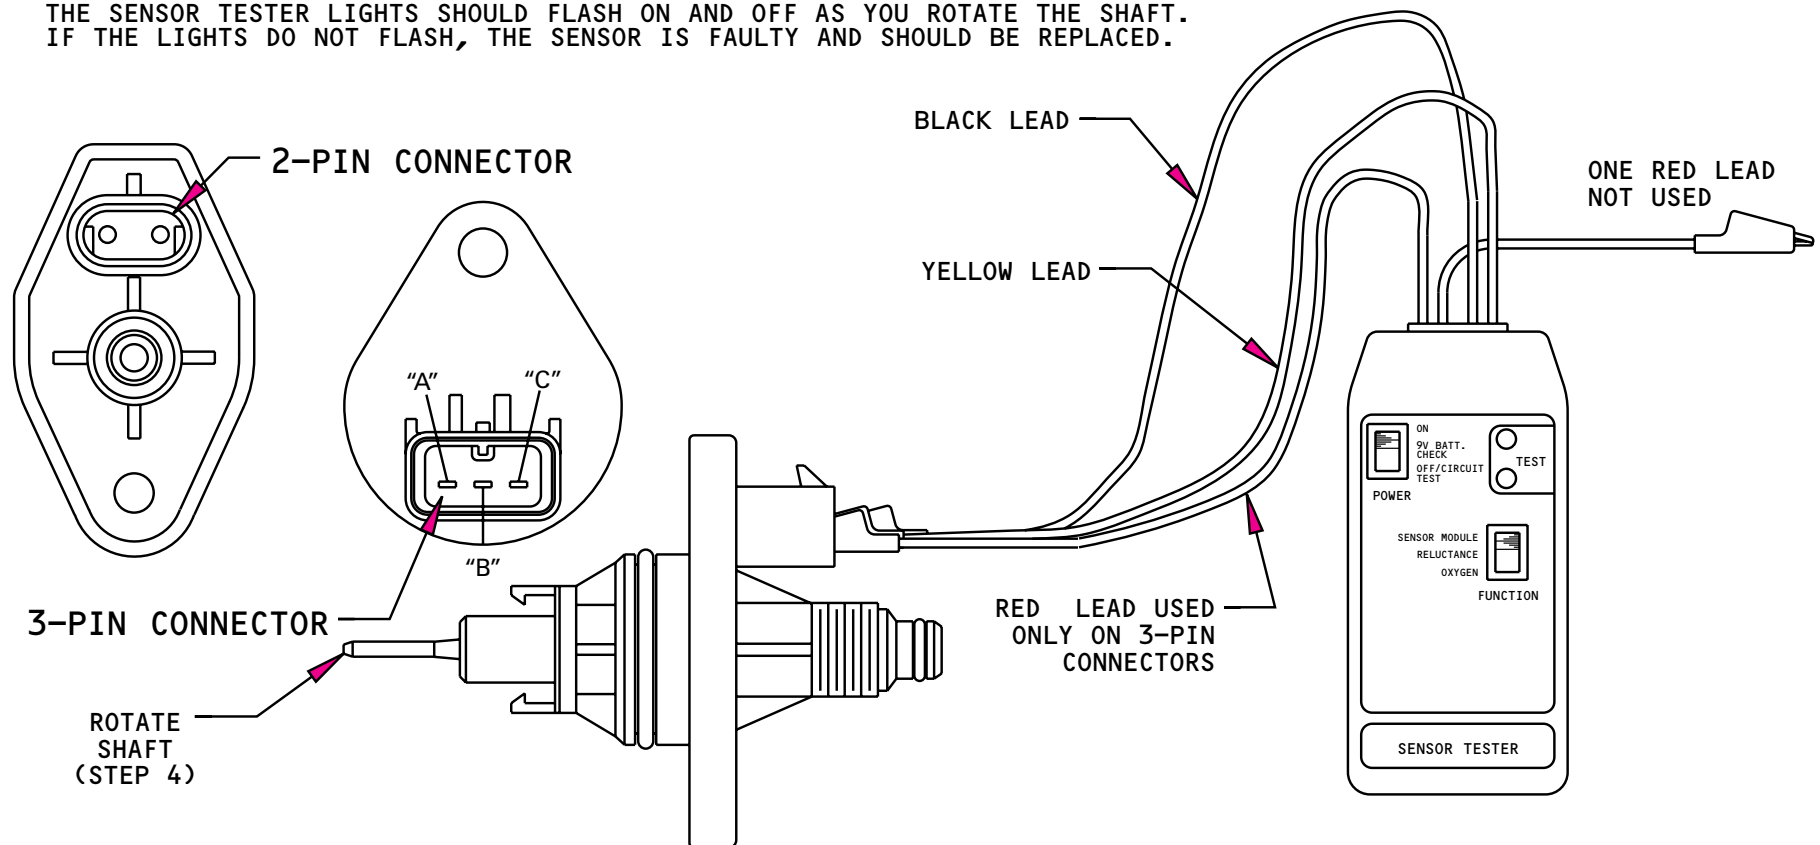

© 2002 WELLS MANUFACTURING CORP. ALL RIGHTS RESERVED.  
NO PORTION OF THIS MANUAL MAY BE REPRODUCED WITHOUT  
THE WRITTEN PERMISSION OF WELLS MANUFACTURING CORP.

TEST SHEET SU4