


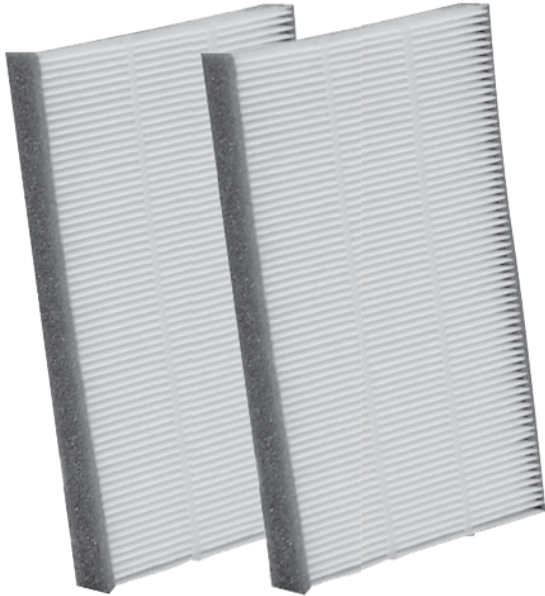

Application: Application: Aplicación:

Acura RL



Location of cabin filter:

Under the dash behind the glove compartment assembly on the passenger side of the vehicle.

Tools:

Unknown or not required.

To remove existing filter:

1. Remove the glove compartment.
2. Remove the trunk opener main switch connector, the self-tapping screws and the glove compartment back cover.
3. Remove the filter lid.
4. Turn the ignition switch ON, and set the recirculation control switch on RECIRCULATE.
5. Pull the filter assemblies out of the recirculation housing. Separate the first filter assembly from the second filter assembly. Then remove the first filter assembly.
7. Remove the second filter from the recirculation housing.
8. Remove the filter from the filter housing.
9. Reverse the procedure to install new filter.
10. Make sure that there is no air leakage.