



- On all systems BAT terminals and "A" terminal must have battery voltage at all times.
- Vehicles with indicator lamps must have at least 10 volts at the I terminal.
- Vehicles without indicator lamps must have 12 volts at the S terminal.

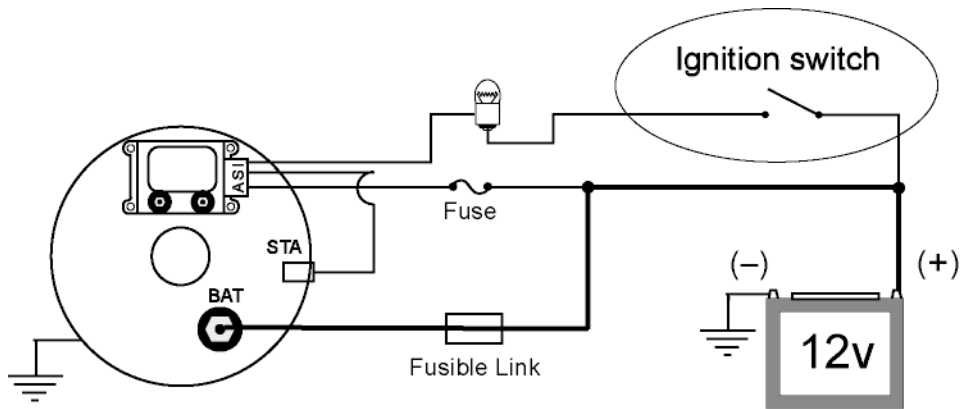

With indicator lamp

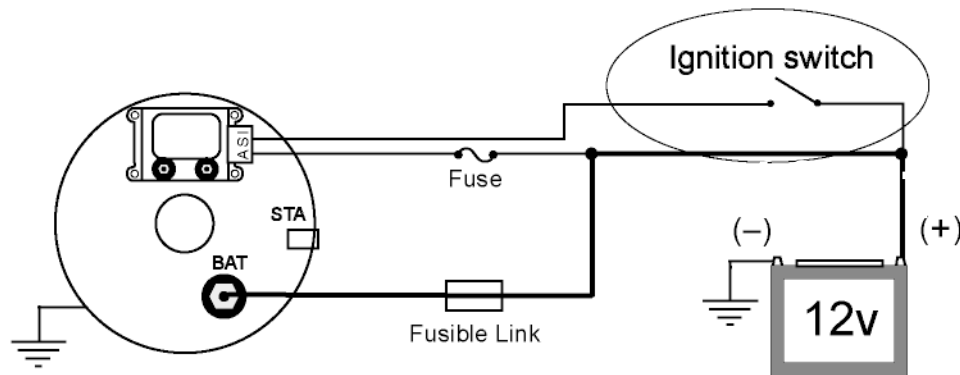

Without indicator lamp