

CONTROL MODULE AM104 (A)

©2009 WELLS Manufacturing, L.P.
All Rights Reserved. No portion of this manual may be reproduced without the written permission of Wells Manufacturing, L.P.

NOTES

1



If "SH" displays, check connections and retest. If there is no change, the module has failed.

2

Use the supplied pin adapters to make the hook-up easier. Do not allow the pins to touch each other during the test or the unit may be damaged.


Terminal "B"
Lead Packet NZ
(3 Req.)





3

**FOR ASSISTANCE CALL:
WELLS MANUFACTURING, L.P.
1-800-558-9770
FOR CUSTOMER SERVICE**

STEP 1: FIND CORRECT LEAD WIRE

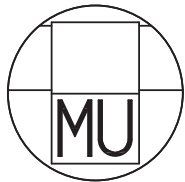

STEP 3: CONNECT TO TESTER

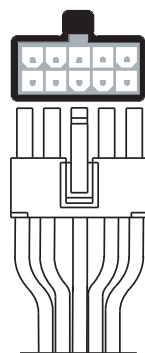


STEP 4: SETTING UP TESTER


Enter product select number "06" and press start to begin test.



STEP 2: MAKE CONNECTIONS TO PART (AM104)

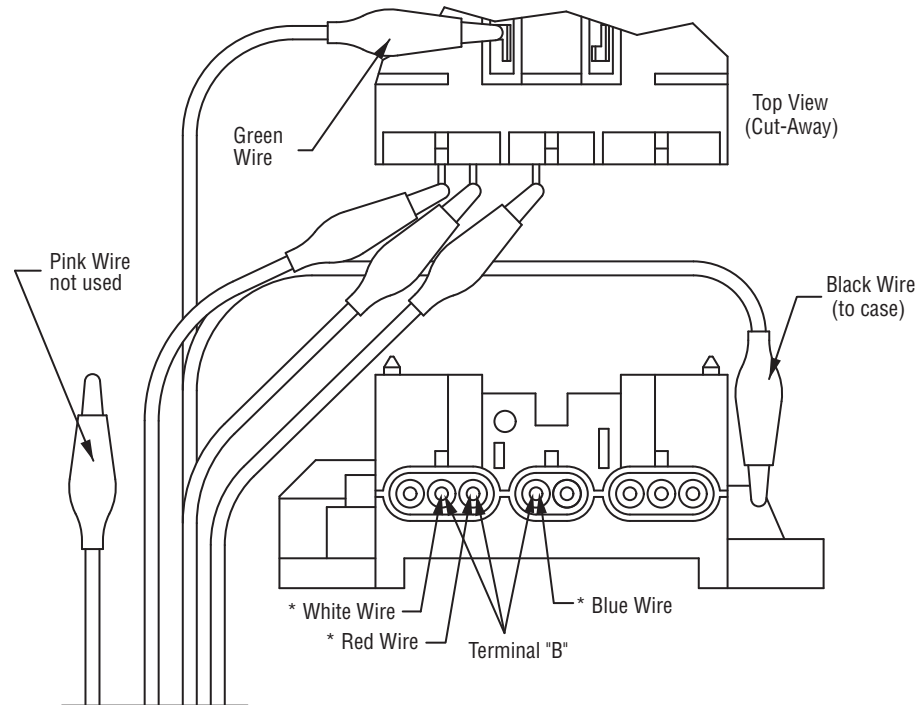

DANGER: Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

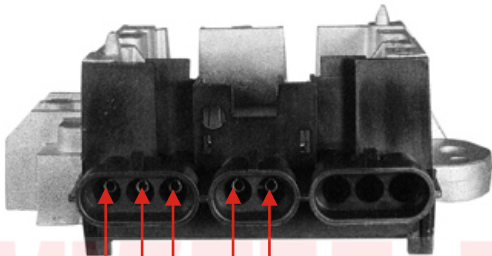

Cluster Tach Signal

ECU Digital Input

Battery Positive

Battery Negative

Tach Signal

WHEELS
ENGINE MANAGEMENT