

## NOTES

1




If "SH" displays, check connections and retest. If there is no change, the module has failed.

2


3

**FOR ASSISTANCE CALL:  
WELLS MANUFACTURING, L.P.  
1-800-558-9770  
FOR CUSTOMER SERVICE**

### STEP 1: FIND CORRECT LEAD WIRE

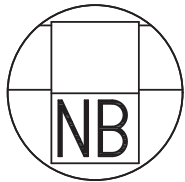

### STEP 3: CONNECT TO TESTER

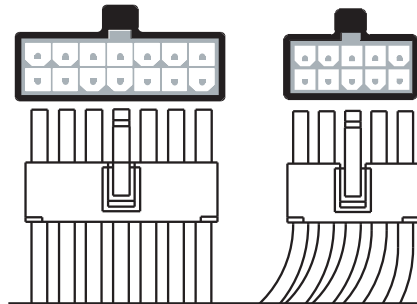


### STEP 4: SETTING UP TESTER


Enter product select number "05" and press start to begin test.



### STEP 2: MAKE CONNECTIONS TO PART (F125)

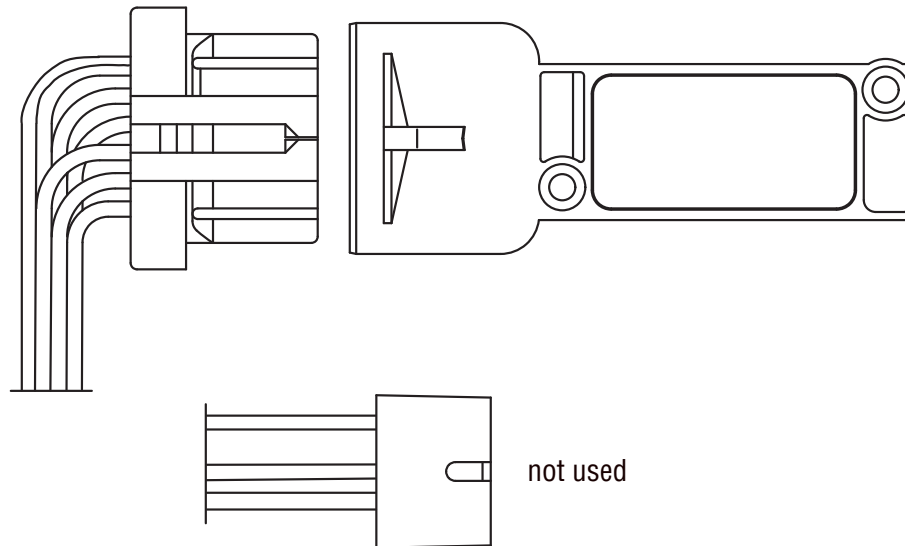

**DANGER:** Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.

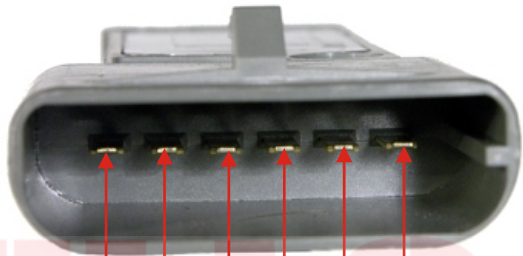

Input Signal Reference-  
Ground

Ignition Coil Negative

Run- Battery Positive  
Through Ignition Switch

Start Terminal

Input Signal Positive-  
Spark Output

Program Line  
Output Signal