



## # 300-575 INSTALLATION INSTRUCTIONS 00-01 Dodge Dakota/Durango 4.7L

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

*Thank you for selecting AIRAID.*



Ask about our AirAid Intake System for your vehicle. Call for details!

### **Parts List**

- (1) Power Plate
- (1) "O"-ring
- (5) 3/4" Linkage Plates
- (5) 6mm x 19mm Flat Head Screws
- (3) 6mm x 60mm Bolts
- (3) 6mm Flat Washers
- (1) 6mm x 12mm Bolt
- (1) 6mm Lock Washer

### **Tools List**


- 10mm Socket
- 4mm Hex Key
- Standard Screwdriver

## *Installation Instructions. Read Me!*

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove the throttle body intake cover and save bolts.
3. Remove air intake assembly.
4. Remove (3) bolts from throttle body.
5. Remove bolts from throttle linkage bracket and save.
6. Install power plate using (3) 6mm x 60mm bolts and flat washers. (Ref. "D")
7. Locate (3) linkage plates and (3) 6mm x 19mm flat head screws before installing the throttle linkage and dipstick bracket. \* **Please Note: Remove the stud from front throttle linkage mount. Dipstick must be relocated to forward mount on lower linkage plate using 6mm x 12mm bolt and lock washer.**
8. Locate (2) linkage plates using (2) flat head screws to reposition throttle body cover using saved bolts. **Refer to Step 1.**
9. Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjusting.
10. Reinstall the throttle body air intake assembly using **Step 3** as an example.
11. Reconnect battery cable. Enjoy!

*The sound of power...The "whistle" means its working!*

Ref. "A"- (1) Power Plate  
(1) "O"-ring

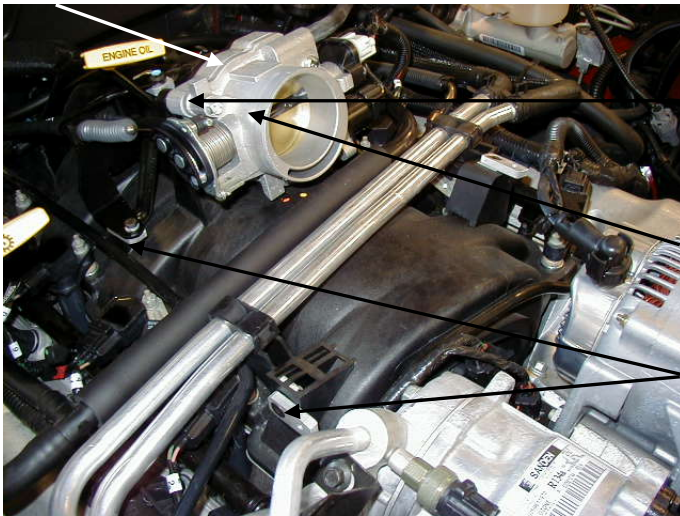

Ref. "D"- (3) 6mm x 60mm Bolts  
(3) 6mm Flat Washers

Ref. "B"- Throttle Body

Ref. "C"- (5) 3/4" Linkage Plates  
(5) 6mm x 19mm Flat Head Screws