



**# 350-532 INSTALLATION INSTRUCTIONS**  
**2005-06 Dodge Magnum RT 5.7L Hemi**  
**2005-06 Chrysler 300C 5.7L Hemi**  
**2006 Dodge Charger RT 5.7L Hemi**  
**All 6.1L SRT-8 Vehicles**

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

*Thank you for selecting AIRAID.*



**Also available for your Dodge Magnum RT /  
Chrysler 300C 5.7L Hemi- the Airaid  
Intake System. Call for Details!**

**Parts List**

1- Power Plate  
1-"O" Ring  
4- 6mm x 60mm Bolts  
4- 6mm Flat Washers

**Tool List**


8mm Socket  
10mm Socket

## ***Installation Instructions. Read Me!***

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove air intake assembly.
3. Remove the original (4) bolts from the throttle body.
4. Install power plate using supplied (4) 6mm x 60mm bolts and (4) 6mm flat washers. (Ref. "C")
5. Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual.
6. Reinstall the throttle body air intake assembly using **Step 2** as an example.
7. Reconnect negative battery cable. Enjoy!

***The sound of power...The "whistle" means its working!***

**Ref. "A"**- (1) Power Plate  
(1) "O"-Ring

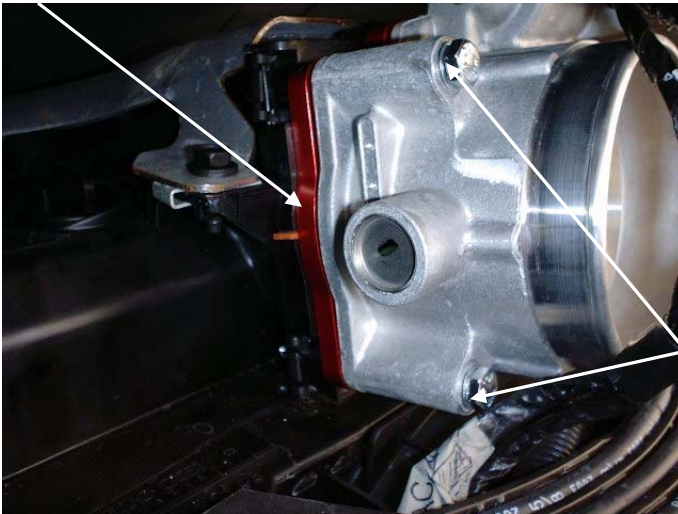

**Ref. "B"**- (4) 8mm x 60mm Bolts  
(4) 8mm Washers