

# AIR RAID®

## INTAKE SYSTEMS

### #200-180 INSTALLATION INSTRUCTIONS

#### 2006-07 H3 Hummer 3.5L/3.7L I5

Thank you for purchasing the Airaid Intake System. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned using the Airaid Filter Tune-Up Kit periodically.

*Thank you for selecting Airaid.*



#### Packing List:

700-451	Airaid Premium Filter	1
KIT180FPC	Front Panel Coated	1
KIT180RPC	Rear Panel Coated	1
KITWSTRIP02	Weather Strip 22"	1
KIT180HP	Hardware & Instructions	1
-KIT6C31MXPPZ	6-32 x 5/16" Screw	4
-KIT6NWSAPZ	#6 Flat Washer	4
-KIT6CNKEPZ	6-32 Keps Nut	4

#### Tools Required for this Installation:

Phillips Head Screwdriver  
5/16" Nutdriver or Socket and Ratchet




# Installation Instructions. Read Me!



1. **Disconnect the negative battery cable.** Unhook the three clips that hold down the air box lid.



4. Assemble the Airaid Quick Fit Panels together with the four supplied screws, washers, and nuts, as shown.

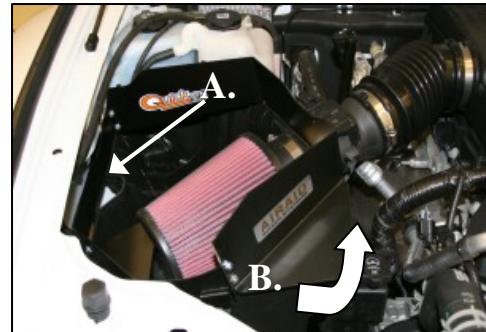

7. **A.)** There are two tabs on the Quick Fit Panel, insert the one closest to the headlight first into the slot on the factory airbox. **B.)** Next, carefully rotate the Quick Fit Panel counterclockwise until the factory clips line up with the tabs on the Quick Fit Panel. Make sure filter tab retains the Airaid Premium Filter. Now lock down the panel with the factory clips.



2. Remove the lid by lifting, and sliding it out of the tabs on the side of the airbox.



5. Install the Airaid Premium Filter on the factory intake tube.



8. Starting at one end of the Quick Fit Panel, install the weather strip as shown.




3. Remove the factory air filter from the airbox. Do not remove factory airbox base. The factory base is required to mount the Airaid Quick Fit Panel.



6. Make sure the filter and the hose clamp are pushed close to the factory airbox wall, and tighten the hose clamp as shown. **Do Not over tighten.**

9. Double check your work, make sure all clamps, nuts, and clips are tight. Make sure there is no foreign material in the intake path. **Reconnect the negative battery cable.**

*Before*

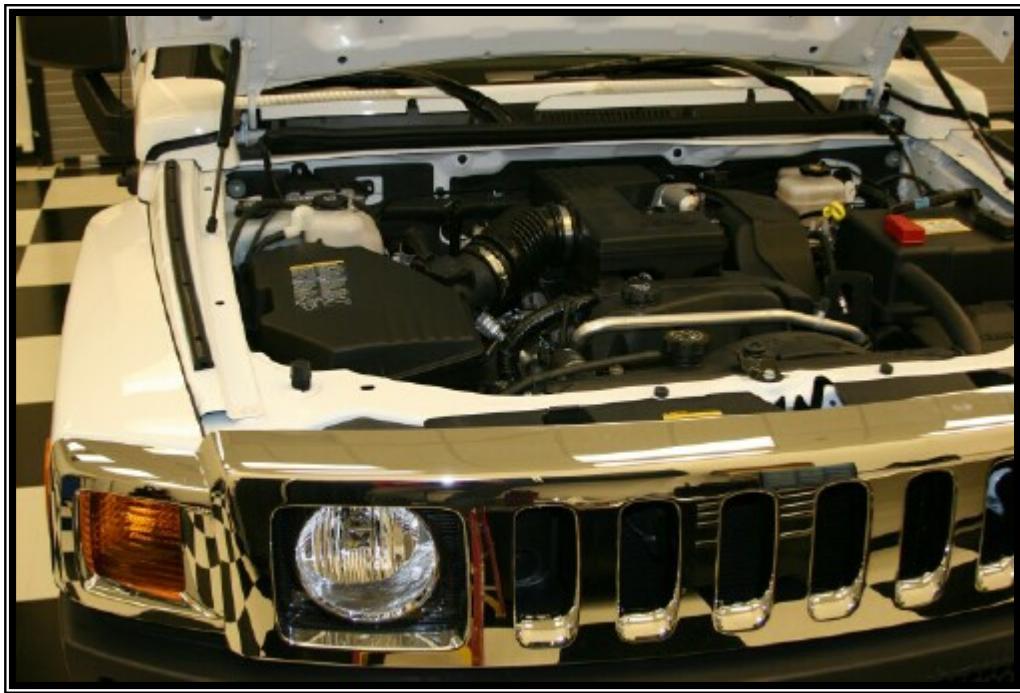

*After!*



# Don't Forget Your AIRAID Filter Tune-Up Kit!



P/N 790-550

Instructions Revision  
Date: 8/22/06