


CHOKE PULL-OFF (NO "WEEP HOLE" TYPE)

TOOLS REQUIRED:
- VACUUM PUMP

TEST PROCEDURE

1. ATTACH THE VACUUM HOSE TO THE TUBE ON THE PULL-OFF.
2. APPLY NO MORE THAN 10" VACUUM PRESSURE TO THE PULL-OFF. THE PLUNGER SHOULD RETRACT AND STAY RETRACTED. IF NOT, THE PULL-OFF IS FAULTY AND SHOULD BE REPLACED.

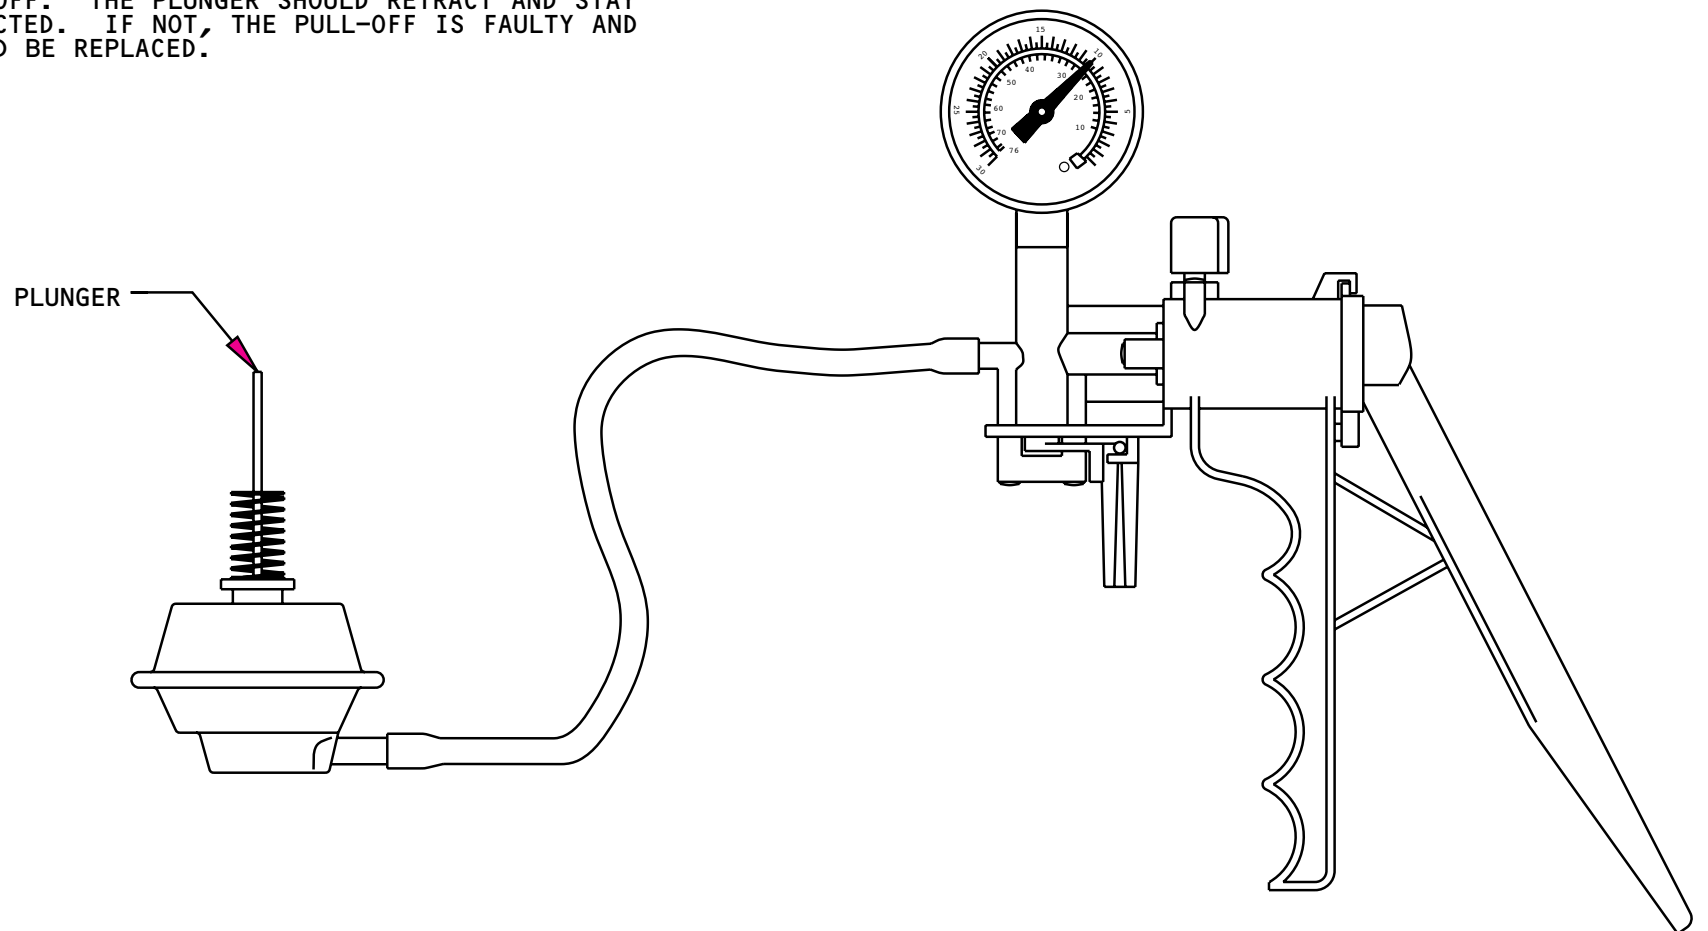

© 2002 WELLS MANUFACTURING CORP. ALL RIGHTS RESERVED.
NO PORTION OF THIS MANUAL MAY BE REPRODUCED WITHOUT
THE WRITTEN PERMISSION OF WELLS MANUFACTURING CORP.

TEST SHEET CP1