



**# 310-970 Modular Intake Tube Instructions  
Or  
#310-770 Jr. Kit Instructions  
2005-2006 Jeep Grand Cherokee 5.7L Hemi**

Thank you for purchasing the Airaid Modular Intake System or Jr. Kit. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid components were carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned using the Airaid Filter Tune-Up Kit periodically.

*Thank you for selecting Airaid.*



**Packing List:**


KIT170T	MIT	1
KIT770HP	Hardware & Instructions	1
-KITHS56	#56 Hose Clamp	4
-KITGRMT03	Grommet	1
-KITCOUPLER03	Coupler 3 1/2"x3"	1
-KITHUMPHS03	Hump Hose 3 1/2"x3"	1
-KIT110T	Nylon zip tie	1

**Tools Required for this Installation:**

10mm Socket  
5/16" Socket, Extension, Ratchet,  
Side Cutter Pliers



## Installation Instructions. Read Me!

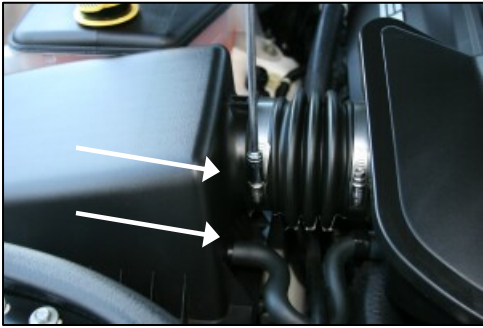


1. **Disconnect the negative battery cable.** Loosen hose clamp on air cleaner box lid. Carefully twist and remove the breather hose from the lid.



2. Remove oil fill cap and set aside.



3. Carefully lift the engine cover for access to the throttle body. *(There are only grommets that hold down the cover, no bolts.)*

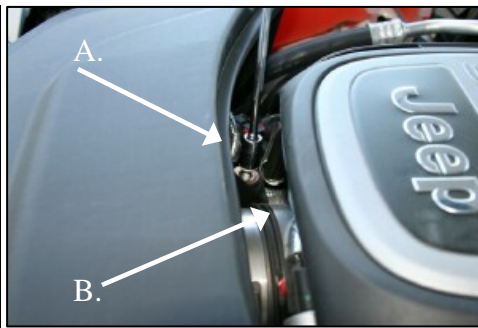

4. A.) Using the 10mm socket, remove the bolt that holds the stock intake system. B.) Loosen the hose clamp that holds the coupler to the throttle body.




5. Carefully pull the intake towards you and rotate it so the bottom faces you, and cut the tie wrap that holds the breather tube, as shown.



6. Slide the clip off of the intake tube that holds the breather line.



7. Carefully twist and remove the temperature sensor from the stock intake tube. Remove the stock intake tube from the vehicle.

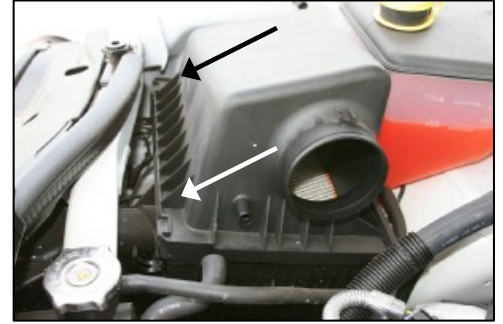


8. If you purchased an Airaid Jr. Kit, unhook the two clips and remove the factory air filter, and replace it with the Airaid Premium Filter supplied in the kit.



9. Reconnect the breather hose. Install the hump hose and two #56 hose clamps as shown. **Do not** tighten the clamps.



10. Install the coupler and two #56 hose clamps on the throttle body as shown. **Do not** tighten hose clamps. Mount factory breather hose to air conditioning line using the supplied zip tie.

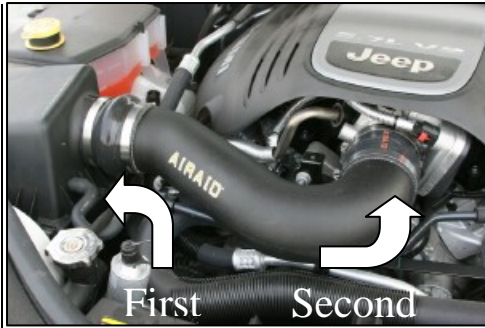


13. Install the MIT into the hump hose first, and then into the throttle body coupler. Adjust to fit, and tighten the hose clamps.



11. Install supplied grommet into Airaid MIT as shown.



14. Re-install the engine cover by firmly pushing it back into the grommets.

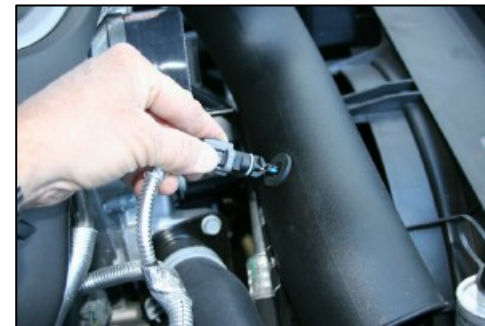

12. Carefully install the temperature sensor into the Airaid MIT as shown. Make sure it's pushed all the way in and the plug is connected to the wire harness.



15. Re-install the oil fill cap.

16. Check for any foreign material in the intake path. Re-check your work for tightness. **Re-connect the negative battery cable.**

**PROUDLY MADE IN THE**  
**USA** 



Don't forget, we also have a Quick Fit Kit for this application!  
Part #310-170



See your local dealer for details!

*Before*

*After!*



**Don't Forget Your AIRAID Filter Tune-Up Kit!**



**P/N 790-550**

Instructions Revision  
Date: 6/9/05