


# Installation Instructions

## Honda Odyssey

Part Numbers:

**75270**

**44174**

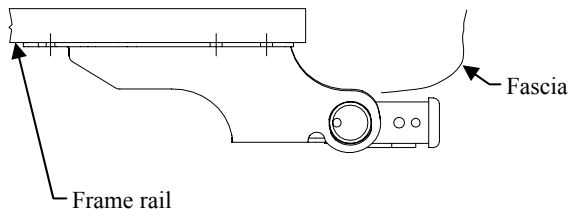

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	<b>5000 (2270 Kg)</b>	<b>500 (227 Kg)</b>
Weight Carrying Ball Mount	<b>3500 (1589 Kg)</b>	<b>350 (159 Kg)</b>

### Hitch Shown In Proper Position


#### Equipment Required:

**Fastener Kit:** 75270F

**Wrenches:** 18mm

**Drill Bits:** None

#### Wiring Access Location: SUV3

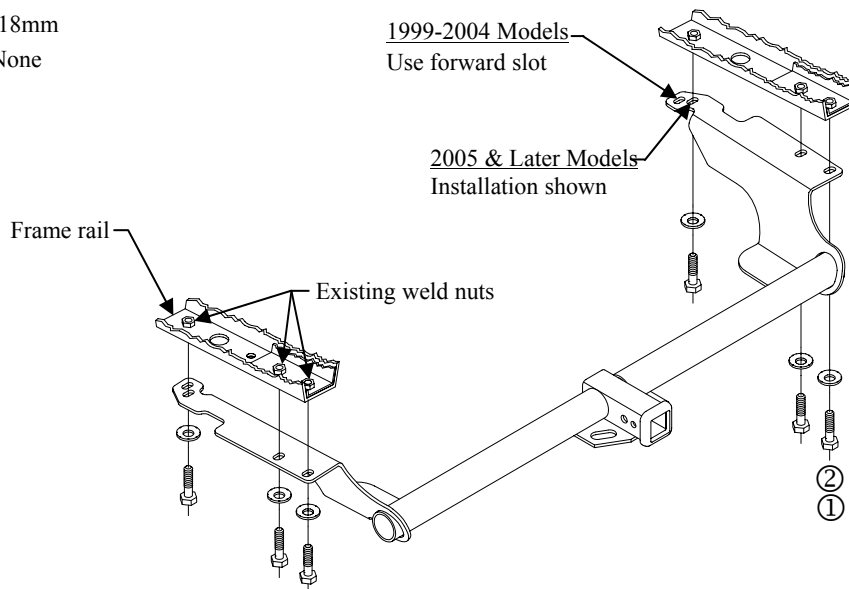

Note: Fasteners typical both sides

①	Qty. (6)	Bolt M12 X 1.25 X 35mm	②	Qty. (6)	Conical Washer
---	----------	------------------------	---	----------	----------------

1. Lower vehicle exhaust and raise hitch into position.
2. Install the six (6) M12 fasteners as shown above.  
Note: 1999-2004 models use the most forward slots in the hitch side brackets.
3. Re-install vehicle exhaust.

Tighten all M12 C18.8 fasteners with torque wrench to 68 Lb.-Ft. (92 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.