

# Cabin Air Installation Instructions

## CAF1740

### Application

Volkswagen Passat (1993-95)

Vehicle may be equipped with a halfround or flat style filter. CAF1740 is a flat style filter and it replaces both halfround 10 1/8" and flat style filter.

### Location of cabin filter:

In front of the windshield under the cowl trim on the passenger side of the vehicle.

### To remove existing filter:

1. Remove the profile rubber (A) (Fig.1) from cross panel.
2. Open three rotary clips and remove cover (B) (Fig. 1).  
Removal of halfround style filter and replacement with flat style filter as shown in (Fig. 2,3).
  - a. Press the two clips (A)(Fig. 2) in the filter direction and remove filter.
  - b. Place new filter (flat filter) and seal point down in filter housing.

Removal and replacement of flat style filter as shown in Fig. 3.

- a. Pull side clamps from filter frame and remove filter.
- b. Place clamps outside car in outer filter folds as shown in i
- c. Place new filter (flat filter) and seal point down in filter housing.

3. Reverse steps 1 and 2 to complete installation.



Fig. 1

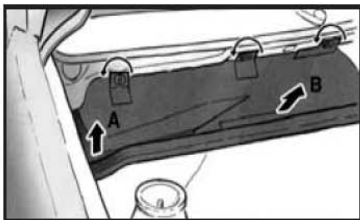


Fig. 2

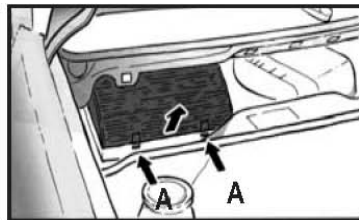


Fig. 3

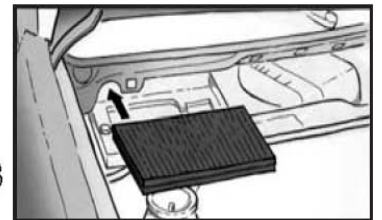


Fig. 4



Fig. 5

