

INSTALLATION PREPARATION

TOOLS NEEDED FOR INSTALLATION:

The majority of these tools will be needed to install your Burco Redi Cuts® or Redi-Set-Go™ mirror replacement.


- PUTTY KNIFE
- FLAT HEAD SCREWDRIVER
- SCISSORS
- TOWEL
- SILICONE OR URETHANE
- RUBBING ALCOHOL
- RUBBER MALLET
- GLASS CLEANER

STEPS FOR SAFETY:

Please follow safety steps prior to installation.

- **SAFETY GLASSES**
Safety glasses are needed to protect eyes against flying glass or debris.
- **CUT-RESISTANT GLOVES**
Cut-resistant gloves must be worn when handling broken glass.
- **LONG SLEEVES**
A long-sleeved shirt is recommended.
- **PROPER VENTILATION**
When working with adhesives and cleaners, proper ventilation is recommended.

INSTALLATION ILLUSTRATION

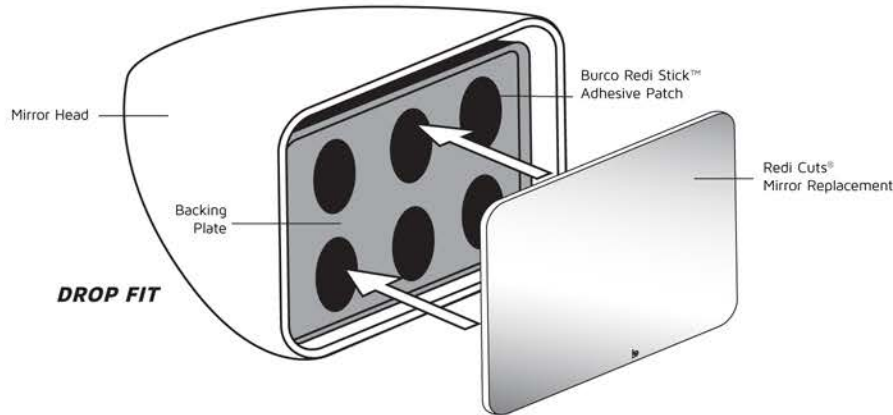

STEP-BY-STEP INSTRUCTIONS

Remove broken glass to install your Redi Cuts®

STEP 1: REMOVE ALL BROKEN GLASS

Remove all existing broken glass and adhesive from the mirror's plastic frame and backing plate with a putty knife.

STEP 2: CLEAN & TEST FIT

Thoroughly clean backing plate with rubbing alcohol. Clean mirror with glass cleaner. Test fit your Redi Cuts® before proceeding to the next step.

STEP 3: APPLY ADHESIVE

Apply Burco Redi Stick™ adhesive patches to the backing plate or mirror replacement, if applicable.

TIP: Install in a warm/dry environment.

TIP: In addition to adhesive patches, you may supplement silicone or urethane.

STEP 4: INSTALL REDI CUTS®

Align and press mirror replacement to the backing plate with firm yet gentle pressure.

STEP 5: CLEAN UP

Clean your installed Redi Cuts® mirror replacement with glass cleaner.