

NOTES

1




If "SH" displays, check connections and retest. If there is no change, the module has failed.

2

Use the supplied pin adapters to make the hook-up easier. Do not allow the pins to touch each other during the test or the unit may be damaged.


3

Terminal "B"
Lead Packet NZ
(1 Req.)





**FOR ASSISTANCE CALL:
WELLS MANUFACTURING, L.P.
1-800-558-9770
FOR CUSTOMER SERVICE**

STEP 1: FIND CORRECT LEAD WIRE

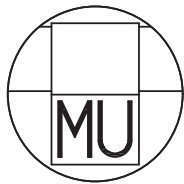

STEP 3: CONNECT TO TESTER

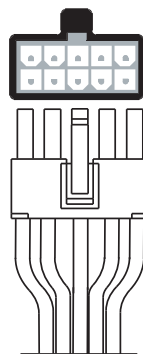


STEP 4: SETTING UP TESTER

Enter product select number "03" and press start to begin test.



STEP 2: MAKE CONNECTIONS TO PART (F133)

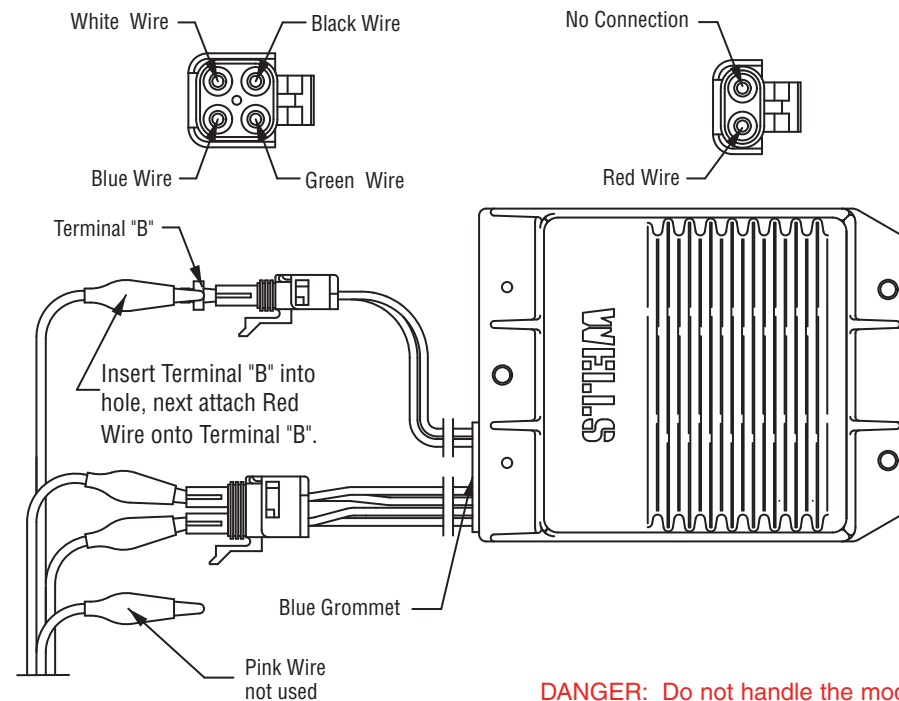

DANGER: Do not handle the module during or immediately after the test sequence, as electrical shocks and burns may occur.



White Wire-Start Terminal

Red Wire- Run Terminal-Battery
Positive Through Ignition Switch



Green Wire- Ignition
Coil Negative Terminal

Black Wire- Battery Negative-
Ground From Distributor

Purple Wire- Input Signal Negative
From Pick-up Coil

Orange Wire- Input Signal Positive
From Pick-up Coil